PROJECT #	REV.	DESCRIPTION	DATE	BY	CHECKED BY
1349	5-14	ADDED SPACER AND HARDWARE	8/14/2014	KDAVIS	

INSTALLATION:

1. ATTACH QUICK RELEASE BASE TO C-FAM-201 USING M4 FLAT HEAD SOCKET CAP SCREWS, INTERNAL TOOTH LOCK WASHERS AND NUTS SUPPLIED WITH THE C-FAM-301.
2. ATTACH THE RELEASE TO THE EQUIPMENT TO BE MOUNTED WITH THE TAB ORIENTED IN AN EASY TO ACCESS POSITION. PLACE THE SPACER BETWEEN THE RELEASE AND THE EQUIPMENT. USE HARDWARE SUPPLIED WITH THE EQUIPMENT OR (4) 8-32 X 1/2" SCREWS.
3. ATTACH THE EQUIPMENT WITH THE INSTALLED RELEASE TO THE BASE, PRESSING FIRMLY UNTIL IT SNAPS INTO PLACE.
4. TO RELEASE, LIFT THE TAB ON THE RELEASE AWAY FROM THE BASE AND TOWARDS THE INSTALLED EQUIPMENT.

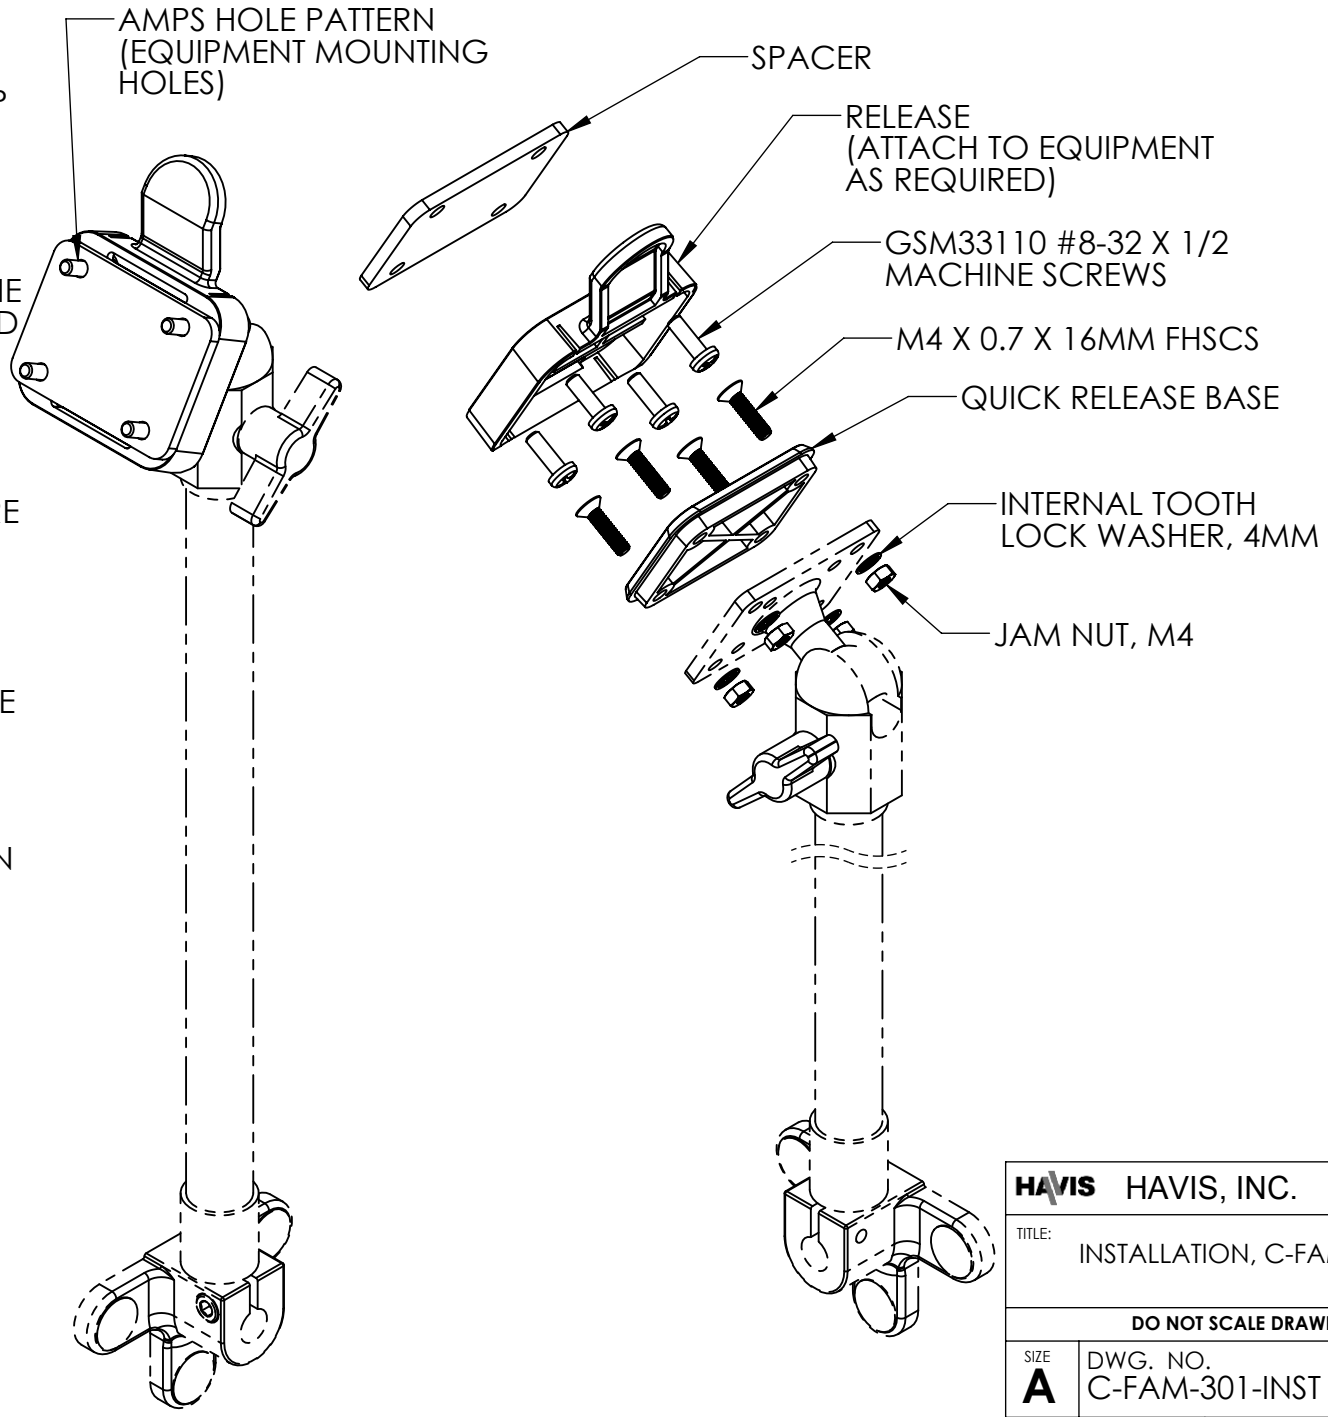

HAVIS HAVIS, INC.
75 JACKSONVILLE RD.
WARMINSTER, PA. 18974
1-800-524-9900

TITLE: INSTALLATION, C-FAM-301

DO NOT SCALE DRAWING

SIZE	DWG. NO.	REV
A	C-FAM-301-INST	5-14

WEIGHT (LB): 1.95	SCALE: 1:2	SHEET 1 OF 1